

D

Required Tools:

- (2) 9/16" Open-End wrench
- Level
- Tape measure
- All thread rod
- Adjustment Nut


Supplied Parts:

- VIBhanger assembly with elasomeric insert (Type MRB)

Installation Steps:

1. Read the entire installation instructions before installing the VIBhanger MRB.
2. If drawings have been provided showing VIBhanger MRB location, locate each VIBhanger at the position shown.
3. Attach the VIBhanger MRB to the structure via the upper, customer-supplied all thread rod and nut assembly (A).
4. Attach the equipment to customer supplied all thread rod and nut assembly (B). If installing the VIBhanger MRB to support pipe or ductwork, install the pipe ductwork using solid, all thread rod. After installing the complete system, remove the solid, all thread rod and replace with the VIBhanger MRB. This is done by removing 1-2" of length from the all thread rod.
5. To level the equipment, turn the adjustment nut (C) to the right to raise the equipment, or left to lower it.
6. Once Step 6 is complete, the VIBhanger MRB has been properly installed.

Shipped VIBhanger MRB Isolator

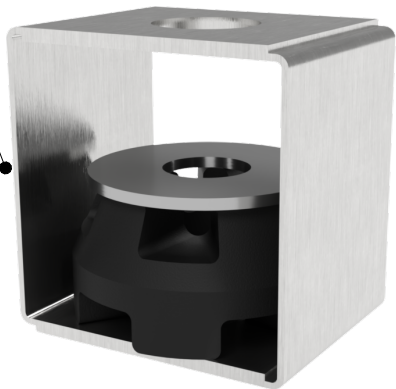


D

C

B

A

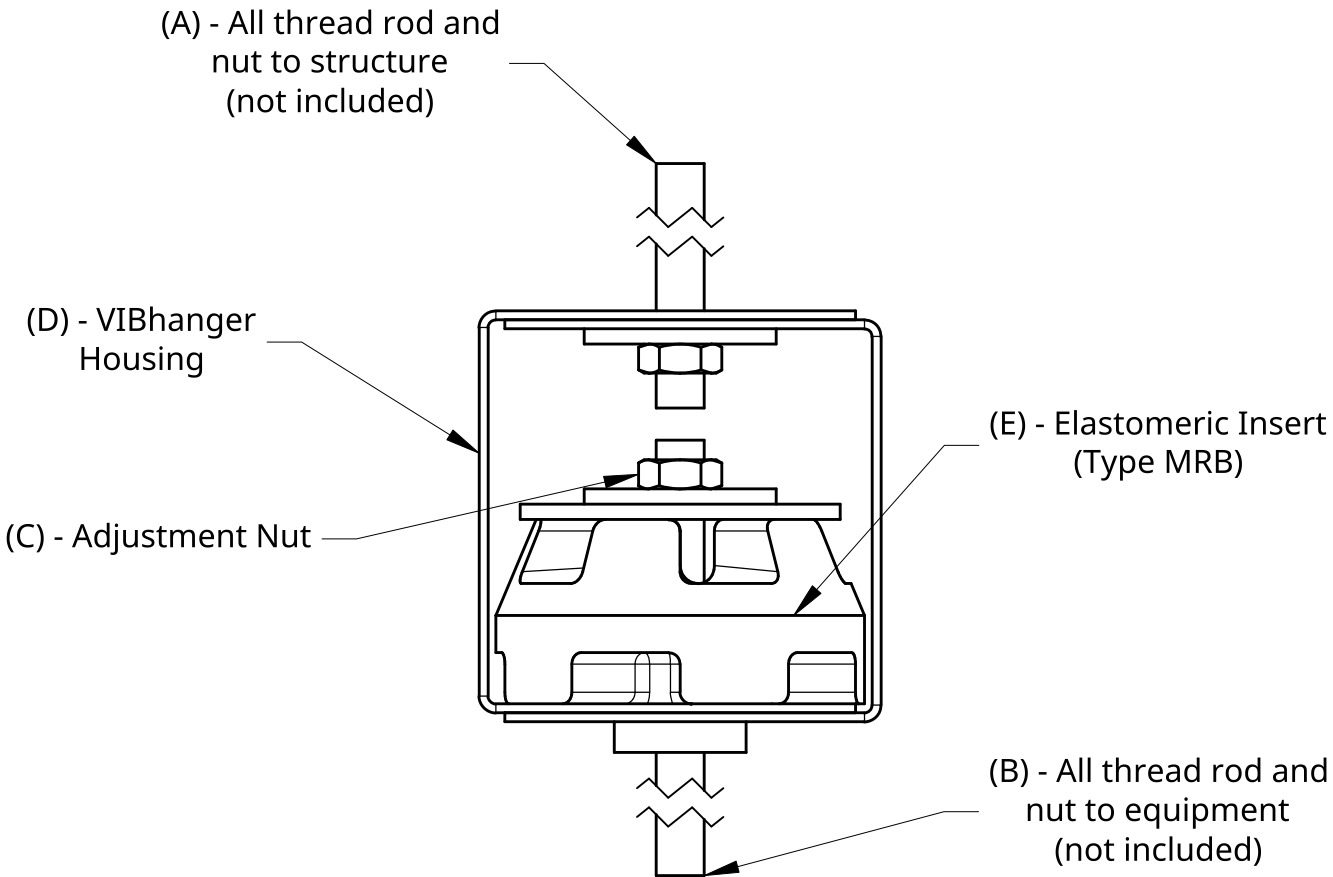

NOTES:
1. DRAWING NOT TO SCALE.

UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN INCHES .XX = ±.0- .XXX = ±.00- .XXXX = ±.000- SURFACE FINISH ✓ DO NOT SCALE DRAWING BREAK ALL SHARP EDGES AND REMOVE BURRS THIRD ANGLE PROJECTION		NAME C.Tupa	DATE 06/30/2026	VIBhanger MRB Installation Instructions	
		LAST MODIFIED C.Tupa	07/08/2026	TITLE 	
		APPROVED		SIZE B	
		MATERIAL	FINISH	DWG NO. VIBhanger MRB	
				SCALE 1:1.5	REV. 1 of 1
				WEIGHT	SHEET